



LIST OF PARTS

1 Barrel	30 Plunger Pin	60 Adjusting Screw, Trigger Pull (A)	89 Rear Spacer
2 Rear Sight	31 Safety	61 Locking Nut	90 Frame Screw, Rear
3 Front Sight	32 Safety Pawl (A)	62 Adjusting Screw, Trigger Overtravel (C)	91 Trigger Guard - Magazine Version
4 Front Sight Base	33 Safety Pawl Spring (A)	63 Locking Nut M4	92 Magazine Latch
5 Front Sight Base Screw 05	34 Roller	64 Nylon Pin (2x)	93 Magazine Latch Spring
6 Front Sight Base Screw 03	35 Safety Pawl Pin (2x)	65 Trigger Mechanism	94 Magazine Latch Pin
7 Rear Sight Base Screw	36 Sear	66 Screw	95 Magazine Catch
8 Front Sight Detent	37 Sear Stop	67 Spring Washer	96 Magazine Catch Spring
9 Detent Spring	38 Sear Spring	68 Stock	97 Magazine Catch Pin
10 Pin, Front Sight Detent	39 Sear Pin (2x)	69 Butt Plate Spacer	98 Magazine Shell
11 Front Sight Cover	40 Bolt Stop	70 Butt Plate	99 Magazine Floor Plate
12 Receiver	41 Bolt Stop Spring	71 Screw, Butt Plate (2x)	100 Floor Plate Lock
13 Bolt	42 Safety Pin	72 Butt Plate Plug (2x)	101 Magazine Spring
14 Bolt Handle Knob	43 Retaining Plate	73 Swivel Wood Screw	102 Follower
15 Extractor	44 Ejector	74 Sling Swivel	103 Magazine Ejector
16 Extractor Collar	45 Ejector Pin	75 Swivel Screw	104 Magazine Ejector Spring
17 Firing Pin	46 Ejector Spring	76 Swivel Screw Washer	105 Magazine Ejector Pin
18 Firing Pin Spring	47 Ball	77 Swivel Assembly (2x)	106 Trigger Spring
19 Support, Firing Pin Spring	48 Trigger Housing	78 Trigger Guard - Box Version	107 Safety Pawl (B)
20 Nut, Firing Pin Spring	49 Trigger	79 Box Shell	108 Safety Pawl Spring (B)
21 Cocking Piece	50 Trigger Lever	80 Floor Plate	109 Safety Pawl Pin
22 Pin, Firing Pin Nut	51 Trigger Lever Pin	81 Floor Plate Pin	110 Bolt Pawl
23 Cap	52 -	82 Floor Plate Latch	111 Bolt Pawl Spring
24 Bolt Sleeve	53 Adjusting Screw, Set Trigger	83 Spring, Floor Plate Latch	112 Bolt Pawl Pin
25 Disassy Catch	54 Set Trigger Lever	84 Pin, Floor Plate Latch	113 Extractor Pin
26 Disassy Catch Spring	55 Spring, Set Trigger Lever	85 Magazine Box Spring	114 Extractor Pin Spring
27 Disassy Catch Pin	56 Pin	86 Magazine Follower	115 Magazine Floor Plate Insert
28 Disassy Catch Plunger	57 Retaining Ring (2x)	87 Front Spacer	116 Fore End Band
29 Plunger Spring	58 Adjusting Screw (B)	88 Frame Screw, Front	117 Fore End Band Screw
	59 Spring, Trigger Pull		118 Fore End Band Nut